

MB&F

HOROLOGICAL LAB

LEGACY MACHINE 101

LEGACY MACHINE 101


FUNCTIONS

05

OPERATING INSTRUCTIONS WINDING / TIME SETTING

07


LEGACY MACHINE 101

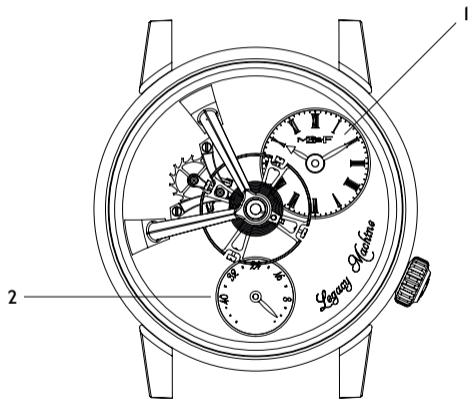

FUNCTIONS

- 1 HOUR AND MINUTE
- 2 POWER RESERVE

LEGACY MACHINE 101

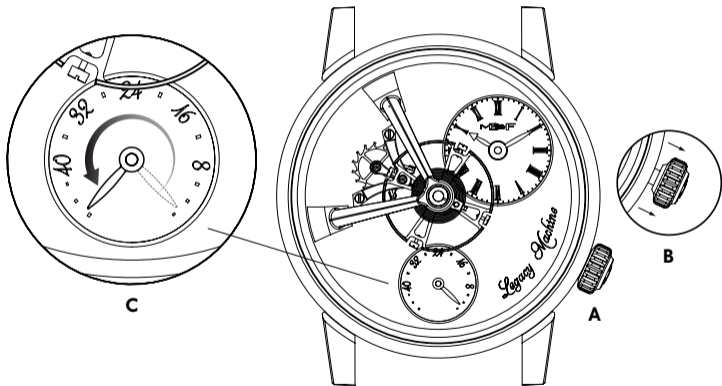

OPERATING INSTRUCTIONS

WINDING

Your watch is equipped with a manual winding movement.

If it has stopped, wind the crown in position **In (A)** till the maximum 48 hours power reserve capacity **(C)**.

TIME SETTING

Crown position Out (B): Turn the crown to set the time.

Slide the crown back against the case when finished.

