

MB&F

HOROLOGICAL LAB

LM101 MB&F × H. MOSER

LM101 MB&F × H. MOSER


FUNCTIONS

05

OPERATING INSTRUCTIONS

07


LM101 MB&F × H. MOSER

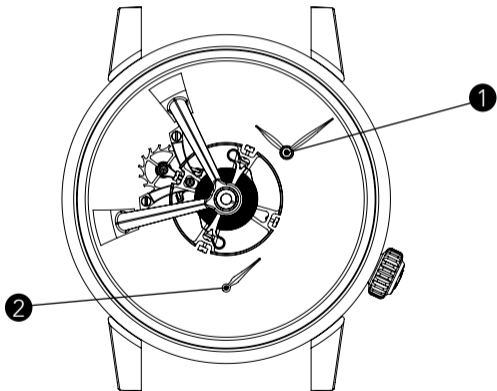

FUNCTIONS

- ① Hours and minutes
- ② Power reserve indicator

LM101 MB&F × H. MOSER

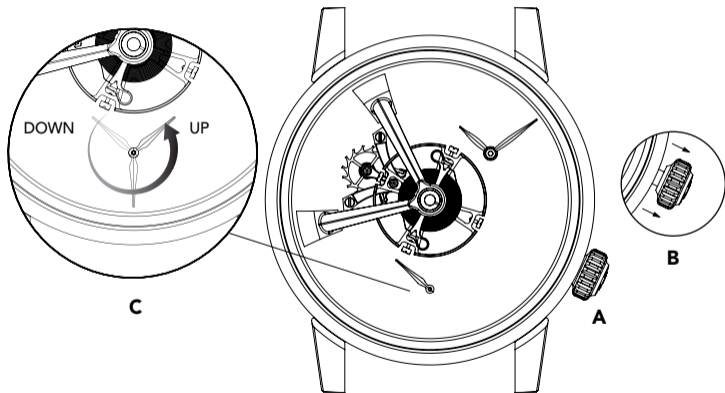

OPERATING INSTRUCTIONS

WINDING

Your watch is equipped with a manual winding movement. If it has stopped, wind the crown in position In **(A)** till the maximum 48 hours power reserve capacity **(C)**.

TIME SETTING

Crown position Out **(B)**: Turn the crown to set the time. Slide the crown back against the case when finished.

