

MEGAWIND

MB&F
HOROLOGICAL LAB

MEGAWIND



FUNCTIONS

05

OPERATING INSTRUCTIONS

07



MEGAWIND

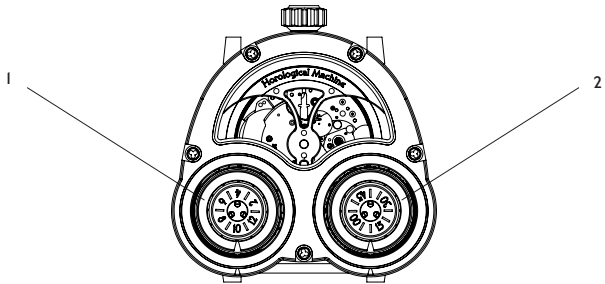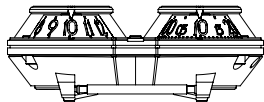

FUNCTIONS

1. HOUR
2. MINUTE

MEGAWIND

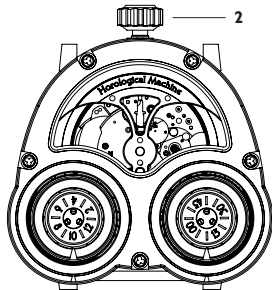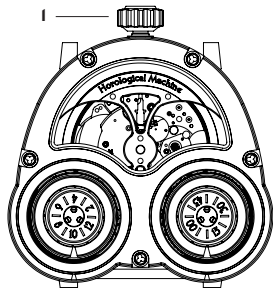

OPERATING INSTRUCTIONS

1. WINDING

Your watch is equipped with an automatic movement and a screwed-down crown.

If it has stopped, turn the crown anticlockwise to slide the crown out and wind the crown a few turns (clockwise).

2. TIME SETTING

«Out» position: turn the crown anticlockwise and slide it fully out. Turn the crown to correct time.

