


FUNCTIONS OPERATING INSTRUCTIONS - WINDING / TIME SETTING


OPERATING INSTRUCTIONS - OPENING AND CLOSING THE TOURBILLON SHIELD

WINDING BOX INFORMATION

WINDING SYSTEM - LE CYLINDER

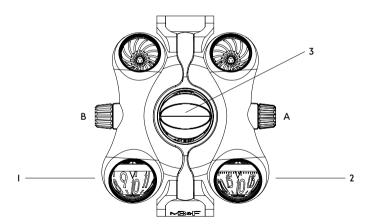

- I HOURS
- 2 MINUTES
- 3 PROTECTIVE SHIELD FOR THE TOURBILLON

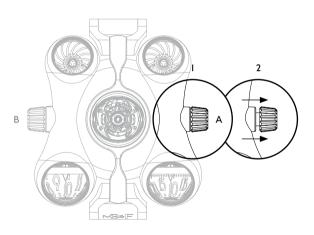

OPERATING INSTRUCTIONS

WINDING


Your watch is equipped with an automatic movement.

If it has stopped, make sure **Crown A** is in **Position I** (pushed against the case) and wind the movement by turning the crown several times clockwise.

TIME SETTING

Pull Crown A «out» (position 2) and rotate to set the time.

The time can be set forwards or backwards by rotating clockwise or anti-clockwise.

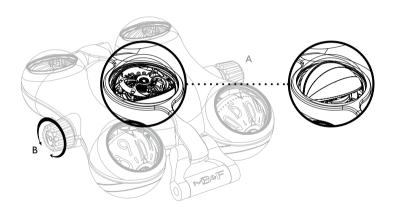

OPERATING INSTRUCTIONS

OPENING AND CLOSING THE TOURBILLON SHIELD

Turn Crown B and rotate clockwise or anti-clockwise; this will open and close the protective shield of the tourbillon.

When closed, the shield blocks harmful rays (especially UV light) from prematurely oxidising the movement's lubrication oils; for this reason we suggest you close it regularly.



I - HORIZONTAL POSITION




2 - VERTICAL POSITION

WINDING BOX INFORMATION

Your timepiece comes in a winding box made especially for Horological Machine $N^{\circ}6$. Please note that the winding box should be laid horizontally (1) to rewind your timepiece.

IMPORTANT

In order to avoid damage, when you remove your timepiece from the winding box, never take it out by holding the crowns, but always from the strap.

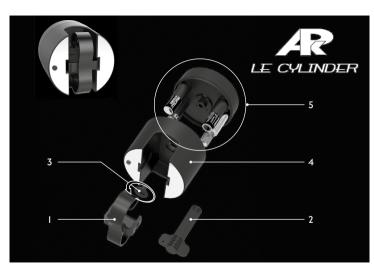

1

WINDING SYSTEM - LE CYLINDER

CHANGING THE BATTERIES

- a) Remove the watch holder (1) by unclipping it in line with LE CYLINDER.
- b) Using the special tool provided (2), unscrew the central screw (3) as shown.
- c) Remove the cover (4).
- d) Insert 4 AA lithium/alkaline 1.5V (LR6) batteries in the housings provided (5), ensuring that they are inserted the right way round
- \rightarrow check the markings on the battery housings.
- e) Replace the lid carefully.
- f) Replace the central screw using the special tool (2).
- g) Ensure that the lid turns freely.
- h) Press the button on the front to ensure that the device is charged and start the cycle.

WINDING SYSTEM - THE CYLINDER

N.B. The cycle will only begin if there is a watch on the watch holder

Charge: The light flashes to indicate the level of charge.

- 4x : Fully charged
- 3x: >60% charge
- 2x : >30% charge
- 1x: Replace the batteries!

WINDING SYSTEM - THE CYLINDER

LE CYLINDER is supplied pre-configured, meaning that in the majority of cases it is operational without the user needing to change any settings.

The pre-defined cycle is set as follows:

- 15 minute wait
- 10 turns anti-clockwise
- I second wait
- 10 turns clockwise
- To change the cycle, please refer to the detailed manual,
 which can be downloaded from: http://www.apk-cylinder.ch/details-e

